

USB Temp

Details for the USB Temperature Probe from usbtemp.com

https://usbtemp.s3.amazonaws.com/manuals/usb-thermometer_installation-en.pdf

```
dmesg | tail

sudo vi /etc/udev/rules.d/usbtemp.rules
SUBSYSTEM!="tty", GOTO="serial_end"
ENV{ID_SERIAL_SHORT}=="", GOTO="serial_end"
SYMLINK+="serial/by-serial/${env{ID_SERIAL_SHORT}}"
LABEL="serial_end"

sudo udevadm control --reload-rules
sudo udevadm trigger

sudo apt-get install digitemp

?
sudo apt-get install owfs

sudo usermod -a -G dialout wuff
wuff@gondor:~/Downloads/digitemp$ newgrp dialout

#initialisation
digitemp_DS9097 -i -s /dev/ttyUSB0

#read temp
digitemp_DS9097 -t 0
```

From:
<http://wuff.dyndns.org/> - **Wulf's Various Things**

Permanent link:
<http://wuff.dyndns.org/doku.php?id=howto:usbtemp&rev=1685700166>

Last update: **2023/06/02 11:02**

